



Aalborg Universitet

AALBORG UNIVERSITY
DENMARK

Ventilation in Commercial and Residential Buildings

Nielsen, Peter Vilhelm

Published in:
Ventilation System and Air Quality

Publication date:
1998

Document Version
Accepted author manuscript, peer reviewed version

[Link to publication from Aalborg University](#)

Citation for published version (APA):
Nielsen, P. V. (1998). Ventilation in Commercial and Residential Buildings. In *Ventilation System and Air Quality* (pp. 26). von Karman Institute for Fluid Dynamics. Lecture Series No. 1998-07

General rights

Copyright and moral rights for the publications made accessible in the public portal are retained by the authors and/or other copyright owners and it is a condition of accessing publications that users recognise and abide by the legal requirements associated with these rights.

- Users may download and print one copy of any publication from the public portal for the purpose of private study or research.
- You may not further distribute the material or use it for any profit-making activity or commercial gain
- You may freely distribute the URL identifying the publication in the public portal -

Take down policy

If you believe that this document breaches copyright please contact us at vbn@aub.aau.dk providing details, and we will remove access to the work immediately and investigate your claim.

Ventilation in Commercial and Residential Buildings

by

Peter V. Nielsen,
Aalborg University

Removal of heat generated by

Persons
Equipment
Solar radiation
...

Removal of vapour, gases and particles as

Moisture
Tobacco smoke
VOC's
CO₂
Odour
Particles and fibres
...

Supply of fresh air

- Ventilation principles
- Components in a ventilation system
- Air diffusion and contaminant distribution in a room
- Ventilation effectiveness and air exchange efficiency
- Minimum airflow rates

Ventilation


A building necessitates supply of fresh air and removal of heat, gases and particles which are emitted in the building. Heat is generated by persons in the building, different types of equipment (PC, television, lighting, etc.) and by solar radiation into the room. Vapour, gases and particles are also generated inside buildings and emitted to the room air. Moisture is generated by people, cooking and drying of e.g. clothes. Tobacco smoke is by far the most important source of chemical pollution of indoor air but a large group of volatile organic compounds (VOC) coming from building materials, furniture, household maintenance products, cosmetics and office materials are also a very important pollution source, see reference [1]. Other gaseous substances are carbon dioxide (CO₂), carbon monoxide (CO), nitrogen dioxide (NO₂) and ozone (O₃) which also may pollute the air in buildings. CO₂ is generated by people and it occurs naturally in the atmosphere. CO and NO₂ can be produced by incomplete combustion and tobacco smoking whereas O₃ is produced by photocopying machines and laser printers, [1].

Odours from gases and vapours will give rise to sensory discomfort and should be removed from the building. Particles and fibres will also influence the air quality and should consequently be removed by the ventilation system or by cleaning.

Ventilation and indoor air quality

A number of areas have to be considered in connection with indoor air quality and ventilation. The selection of ventilation principle and components in the ventilation system will have influence on the indoor air quality.

The main object of this lecture is to discuss the design of the air diffusion system and to give recommendations for minimum air flow rates.

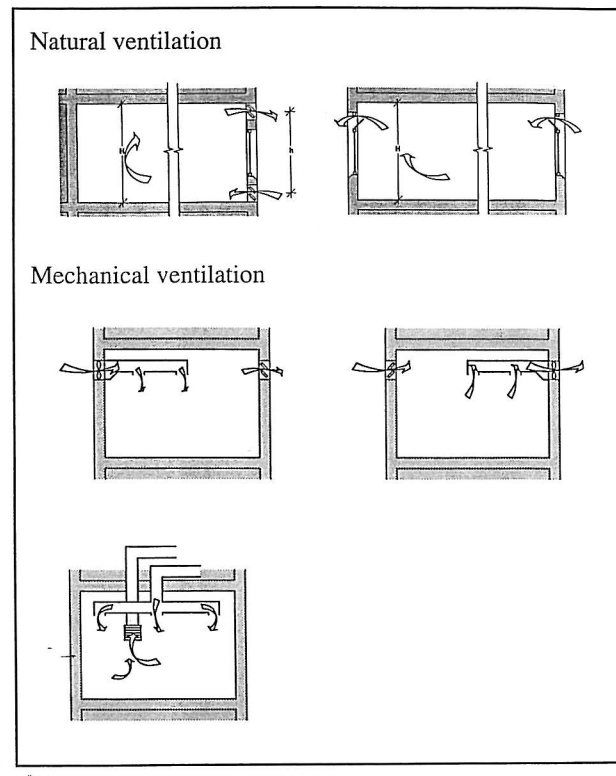


Ventilation principles

The upper figures show two ventilation configurations in the case of natural ventilation. For a single sided double opening (shown in the left figure) the height between the openings will define the thermal stack height which can be maximized by separating them in the wall. Wind will also generate ventilation due to a probability of pressure difference between the two openings separated in vertical distance, see reference [2]. Cross ventilation (right figure) is very effective for wind generated pressure differences with a useful depth of at least three times floor to ceiling height, [2].

The mechanical system can either be a pressurized system, an exhaust system or a balanced system. The pressurized system (upper left figure) is appropriate for fresh air supply in wintertime when the air can be preheated and uncontrolled draught from infiltration is eliminated due to overpressure of the interior. The exhaust system (upper right figure) is appropriate in rooms with pollution sources, and the exhaust openings are located close to the sources. It is an inexpensive system because few exhaust fans can be combined with a large number of wall openings as used in livestock buildings.

The lower figure shows a balanced system which is the configuration usually adopted to provide full air condition permitting recirculation and heat recovery.

ELEMENTS IN AN AIR-CONDITIONING SYSTEM

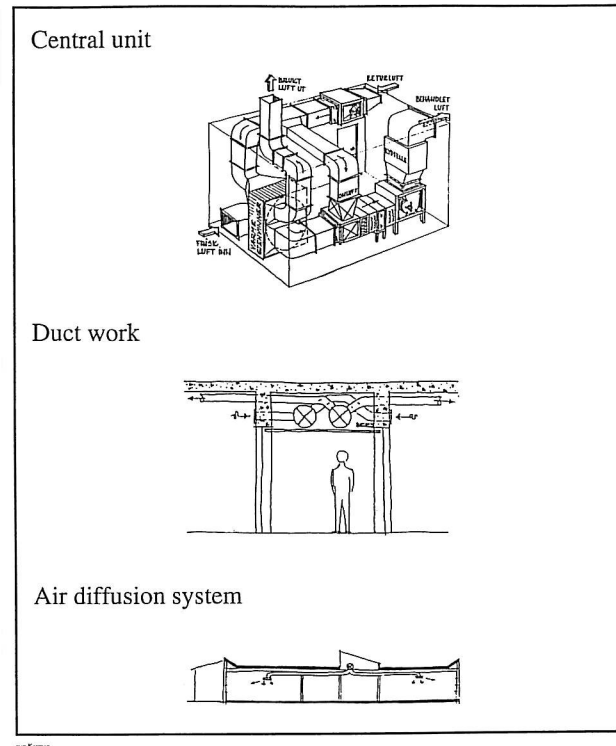


Elements in an air-conditioning system

The central unit, often located in the cellar of the building or on the roof (rooftop unit), prepares the outdoor air for the distribution in the building. The outdoor air is filtered, heated or cooled and heat recovery from the exhaust air or recirculation may take place. The fans for the air condition system will also be located in the central unit.


Each component in the Heating, Ventilation and Air-Conditioning system (HVAC system) can be a sink or source of pollution depending on the quality of the air and the strength of the source, see reference [3]. It has been documented that the cleaning of the duct work has a significantly positive influence on reducing the odour emission because the dust layer seems to be good storage material for the odour.

Certain diseases as legionnaire's disease, pontiac fever, extrinsic allergic alveolitis and humidifier fever may be associated with air conditioning or ventilation systems, but the risk of severe diseases appears to be extremely small, see reference [4].

The air diffusion system (air distribution in the room) is also very important for the indoor air quality. This aspect will be discussed in the following chapters.

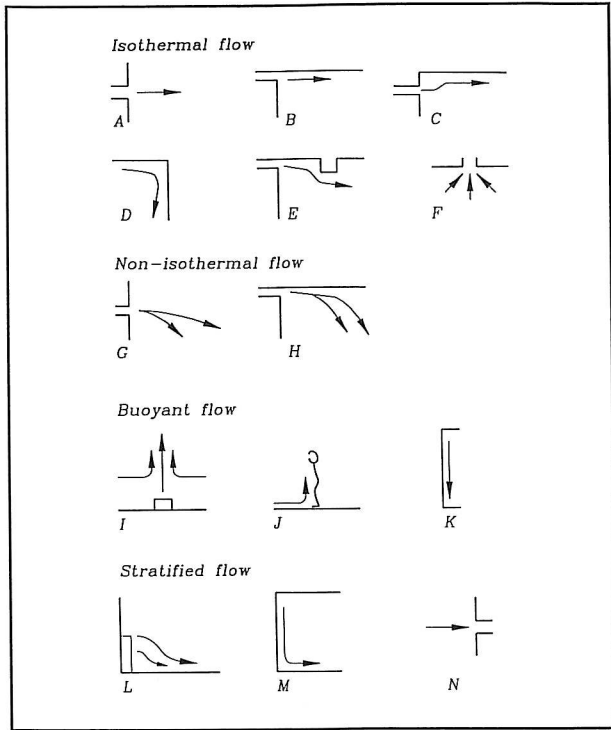

420

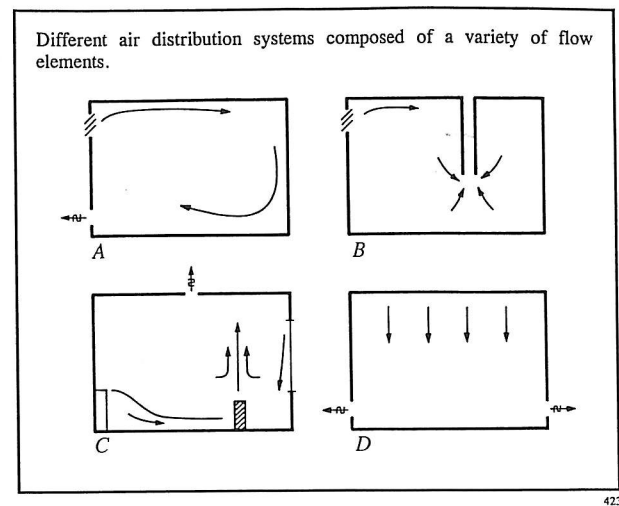

423


Flow elements

Air movement in a room may often be divided into a restrict number of flow elements which can be treated independently of the surrounding flow and dimensions, see reference [5]. A to C show different kinds of supply jets, and D and E show disturbance of jets as e.g. deflection at an end wall and flow around an obstacle. The flow around an exhaust opening is indicated in figure F.

Non-isothermal flow elements consist of a free jet with deflection due to gravity, G, and a wall jet with restricted penetration depth, H. Buoyant flow is illustrated by a thermal plume above a heat source, I, natural convection around a human body, J, and cold downdraught at a wall, K. Stratified flow from a low impulse opening and from cold downdraught is illustrated in figure L and M. The last figure shows the stratified exhaust flow in the case of a vertical temperature gradient (displacement ventilation) N, which is different from the isothermal situation F.

Different air distribution systems

Different air distribution systems can be composed of a variety of flow elements. Figure A shows a mixing ventilation system (diffusion system) with three main flow elements, namely a wall jet below the ceiling, deflection of the jet at the end wall and an exhaust flow close to the return opening. The name "mixing ventilation" indicates that full mixing of room air and contaminants is assumed in this situation, corresponding to a single zone. It will later be shown that this is not always the case in practice. Figure B shows the situation in the case of industrial ventilation when the return opening is used as local exhaust in connection with an emission source. Displacement ventilation is obtained by the combination of four flow elements in figure C. Air is supplied from a wall-mounted low velocity diffuser, and the plume above the heat source will move the air and the contaminant to the upper part of the room where it will be exhausted by the return opening. Cold downdraught is indicated in the figure. This type of flow will generate two zones in the room, a lower zone with cold and fresh air and an upper zone with hot and contaminated air (if the heat source also is a contaminant source). The last figure, D, shows the flow in a clean room with unidirectional flow from the ceiling.

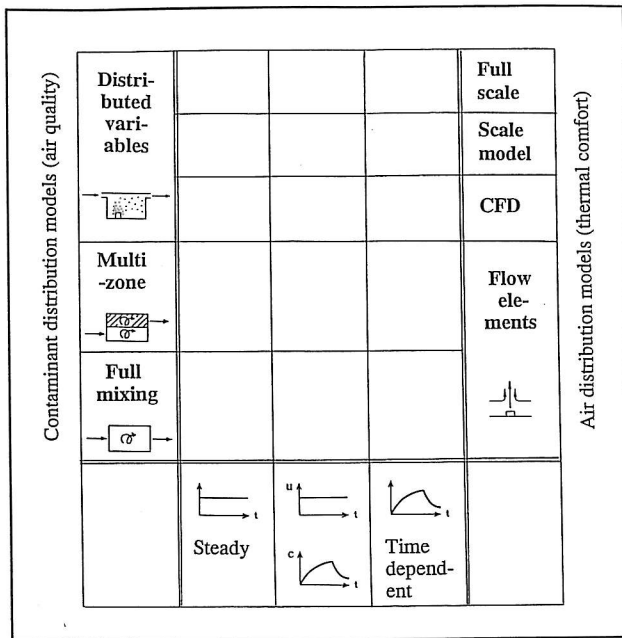

Air distribution and maximum velocity in the occupied zone

Jet Flow

Throw of isothermal jet

Maximum velocity in the occupied zone

Room with furniture and obstacles

Non-isothermal flow

Contaminant distribution

Fully mixed steady flow

Fully mixed steady flow and unsteady emission

Concentration distribution and mixing ventilation

Models for contaminant distribution and air movement


Different combinations and situations which are typical of room air distribution (air diffusion) are shown in the figure. Left side of the figure indicates assumptions which are important for the calculation of contaminant distribution, namely full mixing, multizone and distributed variables. The right side of the figure shows assumptions and methods which are important for the calculation of velocity and temperature distribution, namely flow elements, Computational Fluid Mechanics (CFD) and full scale and scale model technique. The vertical axis is divided in three areas. Fully steady flow and a constant contaminant source which are often considered in a design situation. Constant flow and a variable contaminant source which may be a useful assumption in practical situations and fully time-dependent air distribution and emission of pollutant which are the real situation in buildings.

All the examples discussed in the following chapters can be identified as a combination of the variables shown in *model for contaminant distribution and air movement*.

Mixing ventilation

The following chapter will discuss different aspects of mixing ventilation. Air distribution and contaminant distribution can not be treated separately, and it is therefore important to consider the air distribution and the velocity in the occupied zone as part of a design procedure which has focus on contaminant distribution and air quality.

Different design methods for the air distribution system are mentioned, and different models for distribution of pollution are discussed ranging from a steady fully mixed zone to the concentration distribution obtained by more detailed research (CFD and full-scale experiments).

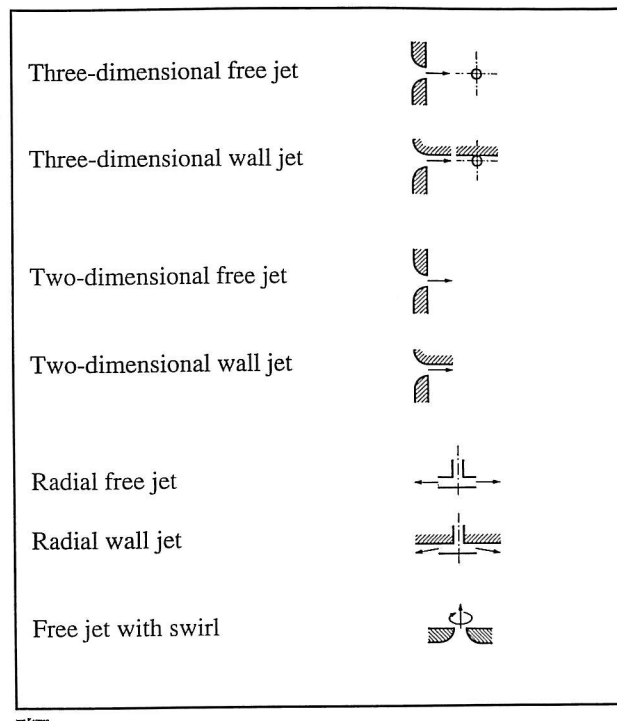

Jet flow

Mixing ventilation is based on jet flow and it is controlled by the momentum flow from the jets. A buoyancy effect is assumed to be of minor importance and the effect should to some extent be overruled in normal situations.


The flow from a supply opening will generate one of three different patterns, namely three-dimensional (axial) flow, two-dimensional flow or radial flow. The velocity in the three-dimensional flow and in the radial flow is inversely proportional to the distance from the opening, and the velocity in the two-dimensional flow is inversely proportional to the square root of the distance. Furthermore, the flow may be divided into free jets and wall jets.

The supply momentum flow will in practice be preserved in the jets.


A free jet with swirl will have a high velocity decay which makes the diffuser suited for variable air volume systems (VAV-systems). A detailed description of the jet flow applied in room air distribution is given in references [6] and [7].

DESIGN ACCORDING TO THROW OF ISOTHERMAL JET

The throw ℓ_{Th} is the distance to a location where the maximum velocity is equal to a reference value u_{Th} . Experience shows that the maximum velocity u_{rm} in the occupied zone is up to 0.15 m/s when ℓ_{Th} is equal to the room length L and u_{Th} is equal to 0.2 m/s.

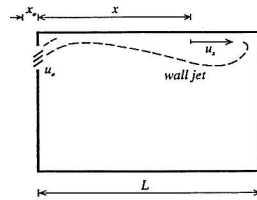

Design chart

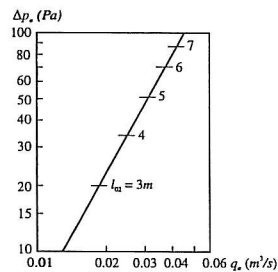



Design according to throw of isothermal jet

A length ℓ_{Th} , called the throw, is defined as the distance from the supply opening to a location where the maximum velocity is equal to a reference value u_{Th} . u_{Th} is often equal to 0.2 m/s in comfort ventilation and slightly higher in industrial ventilation.

It is the purpose of the design procedure to obtain an air distribution in the room with a maximum velocity in the occupied zone u_{rm} which is up to 0.15 m/s. General experience shows that this is achieved when the throw is equal to room length L and the reference velocity u_{Th} is equal to 0.2 m/s. The theory is based on isothermal flow.

The throw is half the length between two air terminal devices with opposite positions or the length between opening and wall in a room with several diffusers. Other definitions of ℓ_{Th} may be used to compensate for different designs of air terminal devices and different room geometry. A throw of $L + H - 1.8$ m is e.g. used when the room is high.

Producers of air terminal devices are presenting the throw ℓ_{Th} in a design chart as a function of the flow rate q_o m³/s and the pressure difference Δp_o Pa.

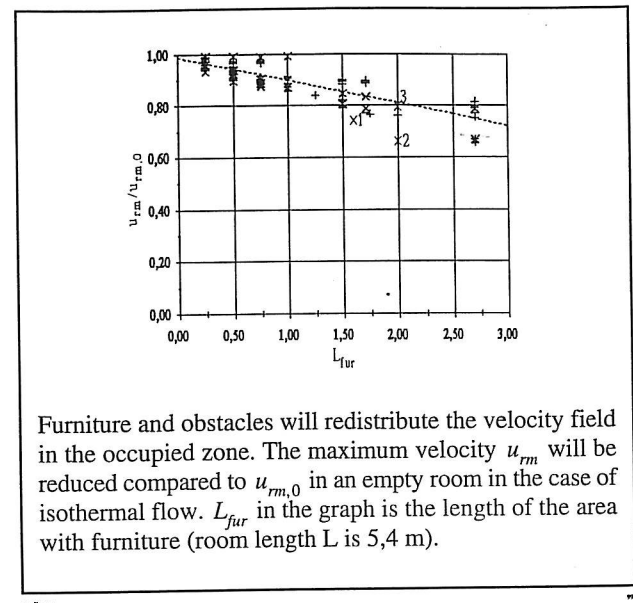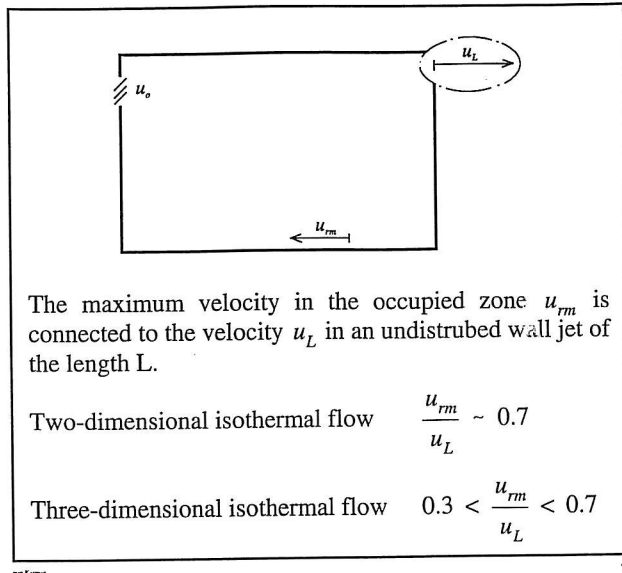

Maximum velocity in the occupied zone

The maximum velocity in the reverse flow u_{rm} is located close to the floor at a distance of $\sim 2/3 L$ from the supply opening. This velocity is also the maximum velocity in the occupied zone in cases where the jet flow below the ceiling and at the end wall is outside the occupied zone. Experiments with isothermal flow show that u_{rm} is a simple function of a reference velocity u_L , which is the velocity in an undisturbed wall jet of the length L from the actual air terminal device. The velocity u_L contains information on supply velocity, distance from inlet and geometrical details which will influence the initial flow, as e.g. type of Air Terminal Device, adjustable blades and distance from the ceiling.


The ratio u_{rm} / u_L will contain both information on velocity decay in the deflected jet due to the end wall height and geometry, and information on the velocity level in the recirculating flow due to the entrainment into the jet below the ceiling. The velocity ratio will especially be influenced by both the deflected jet in a short room and the level of return entrainment flow in a deep room. The ratio u_{rm} / u_L as well as the level of u_L can therefore be used as elements in a design procedure.

$$\ell_{Th} = L \text{ and } u_{Th} = 0.2 \text{ m/s give } u_{rm} = 0.2 \cdot 0.7 = 0.14 \text{ m/s for } u_{rm} / u_L = 0.7.$$


The design method is described in references [6], [7], [8], [9].

Room with furniture and obstacles

Furniture and obstacles will redistribute the velocity field in the occupied zone. The velocity will increase in some areas and decrease in other areas. The maximum velocity will be reduced compared to the value in an empty room in the case of isothermal flow. This effect indicates that friction losses are important for the recirculating flow, see reference [10].

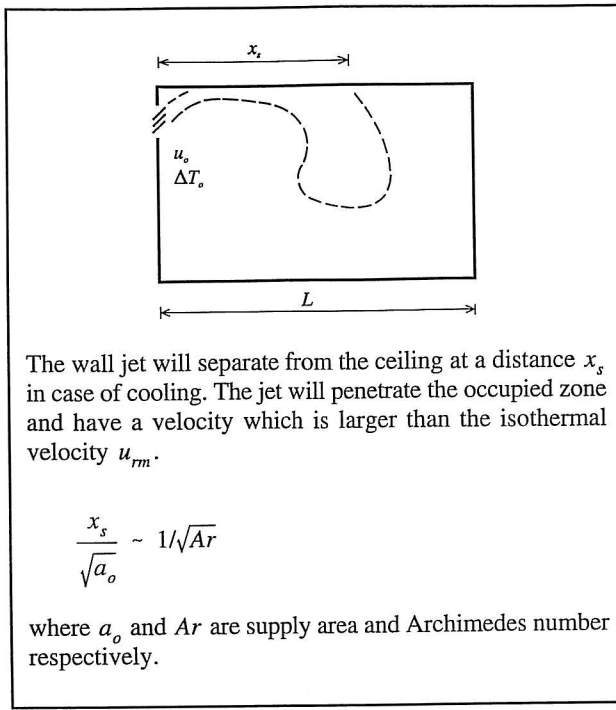

Contaminant distribution given as c/c_R in a room with two-dimensional flow and an emission source at the floor (full length).

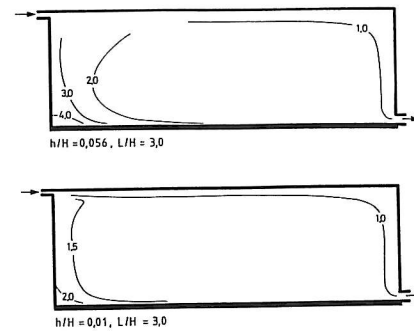

Fully mixed steady flow

$$c_{Room} = c_R = S/q_o$$

The figure shows that the distribution is close to a fully mixed flow in the case of a small supply opening h/H .

Non-isothermal flow

An undisturbed wall jet will penetrate the ventilated room in the case of isothermal flow, and it will entrain air from the occupied zone to induce recirculating air movement in the room. This picture will change when a thermal load is supplied to the room. The supply temperature will be reduced and the load may reach a level such that the wall jet will separate from the ceiling at a distance x_s from the supply opening and flow down into the occupied zone.


Situations with a short penetration length are undesirable because the jet may have a high velocity and a low temperature when it flows into the occupied zone. Thus a calculation of the penetration depth is therefore a part of the design procedure of the air distribution system. An acceptable length is dependent on the actual product. It is often recommended that the penetration length x_s/L should be equal to or larger than 0.5. Air terminal devices with a high diffusion may work with a very short penetration length, see references [6], [7] and [11].

Contaminant distribution


The basic idea of mixing ventilation is to create a recirculating flow which will absorb the contaminant from different sources in such a way that the local concentration is low everywhere in the room. A transport of contaminant must, on the other hand, both involve a turbulent diffusion and a convection which will give rise to concentration gradients.

The figure shows the concentration distribution in a room with two-dimensional isothermal flow and a contaminant source which covers the whole floor. The local concentration is normalized by the concentration c_R in the return opening. The concentration in the left side of the room below the supply slot is large compared with the concentration in the return opening, so it is obvious that there will be significant gradients in rooms with mixing ventilation, [12]. The figure shows that the distribution is close to a fully mixed flow in the case of a small supply opening h/H and isothermal flow. It is the degree of entrainment and recirculation in the room which is important for the mixing process. The process is independent of the supply velocity.

DYNAMIC CONCENTRATION MODEL

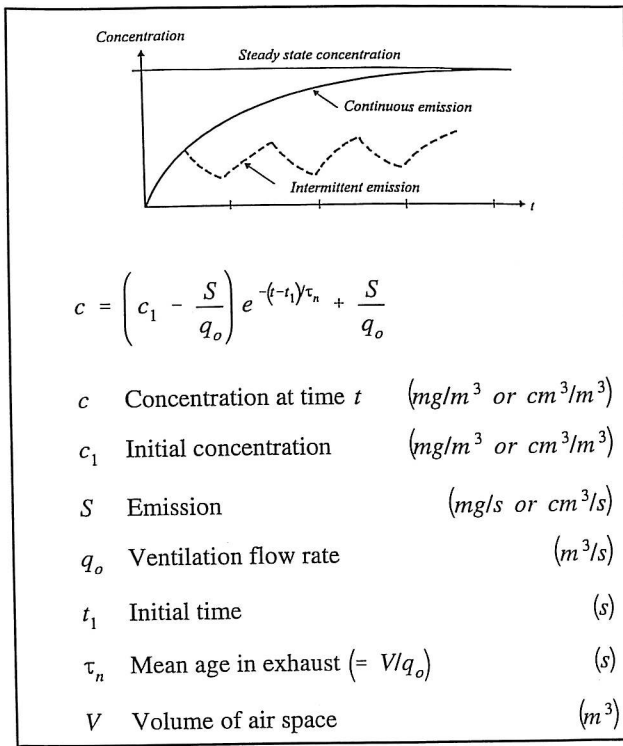

LOCATION OF CONTAMINANT SOURCE

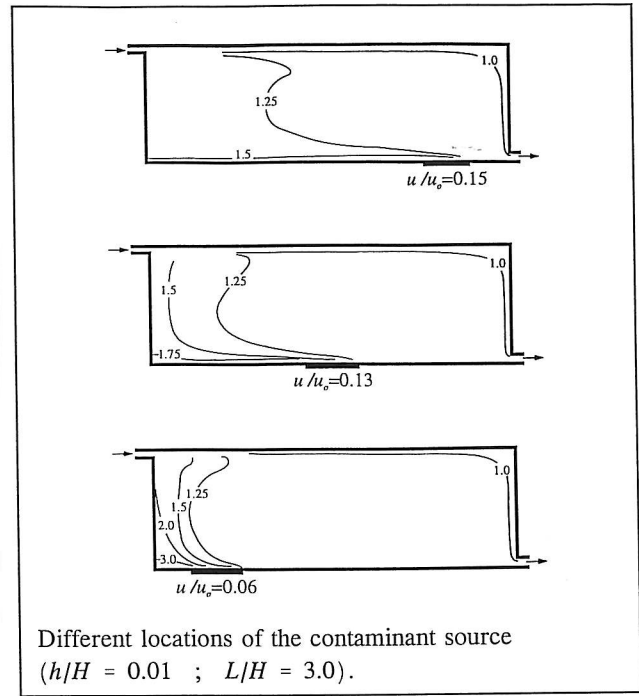


Dynamic concentration model

This model can be used in situations where the flow is considered to be steady and fully mixed with a time-dependent contaminant source. A typical example is the CO_2 emission in a meeting room with 50 people. If the room has a volume of 600 m^3 and an air change rate of 2 h^{-1} then the model will show that the concentration will be $778 \text{ cm}^3/\text{m}^3$ after half an hour and $918 \text{ cm}^3/\text{m}^3$ after one hour. A dynamic concentration model seems to be adequate for this situation.


Location of a contaminant source

The figure shows an example of concentration distribution from a line source. It can be seen that the location of the contaminant source is important for the concentration distribution and the concentration level. The line source is located close to the area with the maximum velocity in the occupied zone in the upper sketch, and the maximum value of the concentration has a level of $1.25 - 1.5 c_R$ in the area below the supply slot. The concentration will increase to a level of $3.0 c_R$ if the sources are located below the supply slot in the stagnant air as shown in the lower sketch which emphasizes the importance of source location in a room with mixing ventilation.

Variables as for example a dimensionless concentration c/c_R at a given location are independent of the Reynolds number in the case of fully developed isothermal flow or fully developed flow with constant Archimedes number, see reference [12].

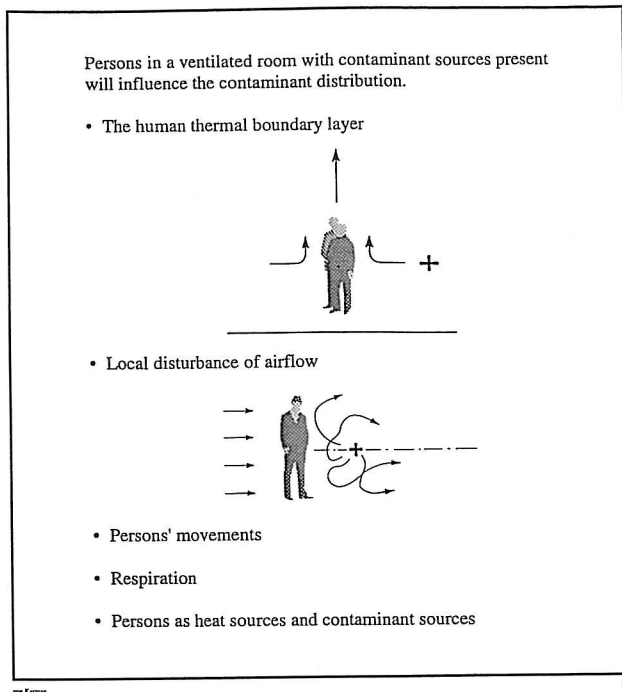

Contaminant distribution given as $c^* = c/c_R$ in a room with an emission source along the floor. Different exposures are obtained for the person at different positions.

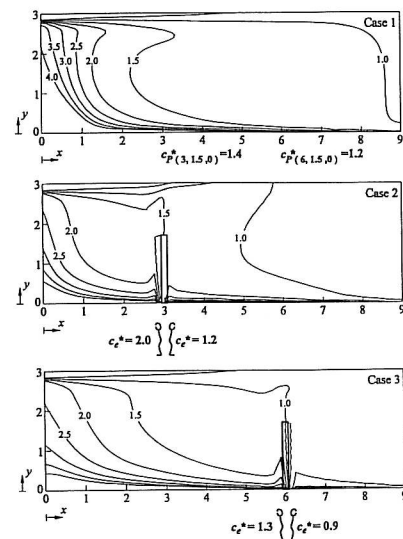

Henrik Brohus, 1997

Interaction between persons and contaminant sources

A person will influence the contaminant distribution if concentration gradients are present in the room. The human thermal boundary layer will add a vertical movement to the field, and movement as well as flow restriction from the body may give rise to a vertical and a horizontal flow of contaminants, even in the opposite direction of the main flow.

People and interaction between people will have a great influence on the indoor air quality. This has been studied for some years at Aalborg University, and reference should be made to some of the reports on the subject taking both mixing ventilation and displacement ventilation into consideration as well as interactions between persons and moving persons. See references [13], [14], [15], [16], [17] and [18].

Room with mixing ventilation and one person

This figure shows one example of the information which can be obtained when a person is added to the flow field in a room. The room is of the same type as shown in the figure *Contaminant distribution*. The contaminant is emitted from the floor surface. The upper figure shows the concentration distribution without a person in the room as well as the concentration c_p^* at the two locations for the person. The two lower figures show that the exposure c_e^* will vary from 0.9 to 2.0 which is outside the variation of c_p^* . It is obvious that both location and orientation of the person are important, [16].

DISPLACEMENT VENTILATION

Air distribution and maximum velocity in the occupied zone

Principle

Temperature distribution

Velocity distribution

Contaminant distribution


Two-zone model

Room with contaminant distribution

Displacement ventilation

The following chapter will discuss different aspects of displacement ventilation. Air distribution and contaminant distribution can not be treated separately, and it is therefore important to consider the vertical temperature gradient and the velocity in the occupied zone as a part of a design procedure which has focus on contaminant distribution and air quality. A design method for the air distribution system is mentioned, and different models for distribution of pollution are discussed ranging from a steady fully mixed two-zone model to the concentration distribution obtained by more detailed research (CFD and full-scale experiments).

FLOW IN A ROOM WITH DISPLACEMENT VENTILATION

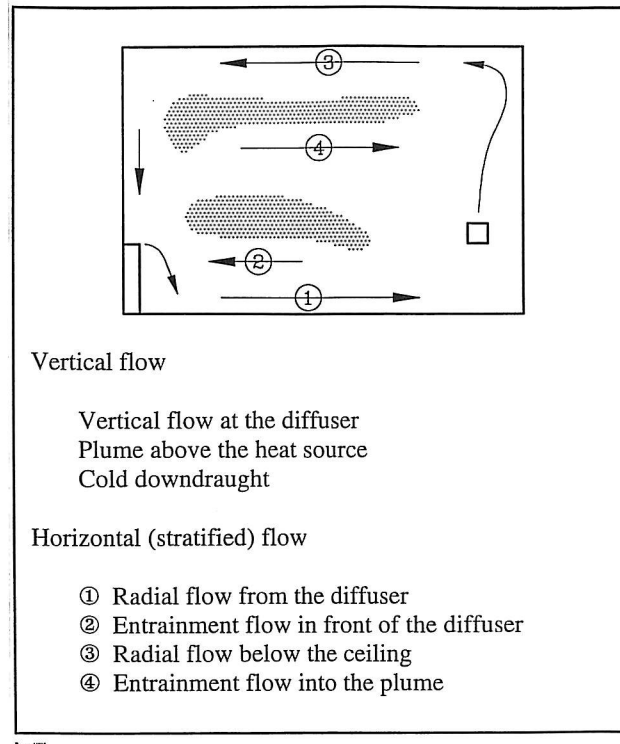

Flow in a room with displacement ventilation


The airflow to the room is supplied directly into the occupied zone by floor or by wall-mounted diffusers. The plumes from hot surfaces, from equipment and from persons entrain air from the surroundings in an upward movement and the airflow is extracted from the room by return openings in the ceiling.

The figure shows a more detailed picture of the flow. Three areas with vertical flow are indicated. The flow from the diffuser has a downward direction because cold air is supplied at the full height of the diffuser. The vertical flow above the heat source obtains momentum from the buoyancy effect on the heated air. A vertical cold downdraught exists at the walls due to a gravity effect on the cooled air close to the surface. The downward flow at the wall may be connected to a detrainment effect where movement in the outer part of the boundary layer will stop at density levels equal to the surrounding density. The temperature distribution will force the remaining flow in the room to be horizontal and stratified. The figure shows four areas with horizontal flow. A stratified radial flow from the diffuser exists at the floor (1), and above this area a return flow (2) is connected to the entrainment in front of the diffuser.

The plume above the heat source will generate a stratified radial flow below the ceiling (3). A flow (4) is present in the middle of the room and it is connected to the entrainment into the plume. This flow covers a large part of the room height, and it has a temperature which is increasing with the height. Areas with low velocity are shown between the flows of the opposite direction (2), (4) and (3).

The principles in displacement ventilation are further discussed in references [19] and [20].


TEMPERATURE AND CONCENTRATION DISTRIBUTION

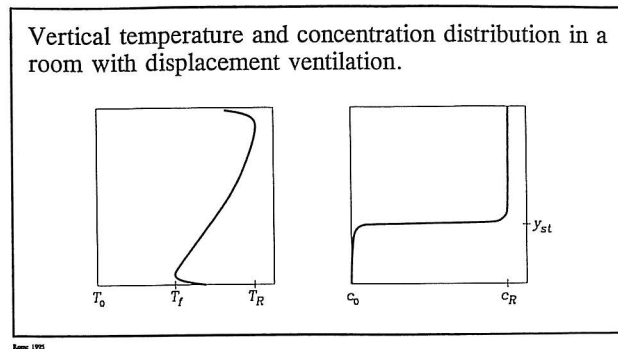

Temperature and concentration distribution

The figure shows the vertical temperature distribution and a simplified vertical concentration distribution in cases where some of the heat sources are contaminant sources. The lowest sketch in the figure shows that the concentration in a lower part of the room has the level c_o corresponding to the supply concentration. The plumes in the room will entrain fresh air (concentration c_o) up to a height where the total vertical volume flow is equal to the supply flow q_o . This height is called the stratification height y_{st} . The plumes continue above this height, and the entrainment will generate a full mixing in the upper region with a concentration c_R corresponding to the concentration in the return flow as shown in the figure. More complex profiles with stratified concentration peaks can be obtained when the contaminant sources are connected to weak heat sources as shown for example by reference [18].

The temperature distribution is described by the energy transport equation, the radiation and the conduction through the surfaces. The temperature distribution influences the flow via the buoyancy term in the vertical momentum equation. The energy transport equation and the transport equation for contaminant are identical in structure, and it is therefore possible to study the influence of radiation, conduction and buoyancy by comparing the two curves in the figure. The temperature close to the floor T_f is high in comparison with the equivalent concentration distribution. The high level of temperature is due to radiation from the ceiling, and the gradients close to the floor and the ceiling indicate the corresponding heat transfer by convection. The vertical temperature distribution varies almost linearly with height compared with the concentration distribution. This may be the result of an influence from the vertical temperature difference and detrainment at the walls, see reference [19].

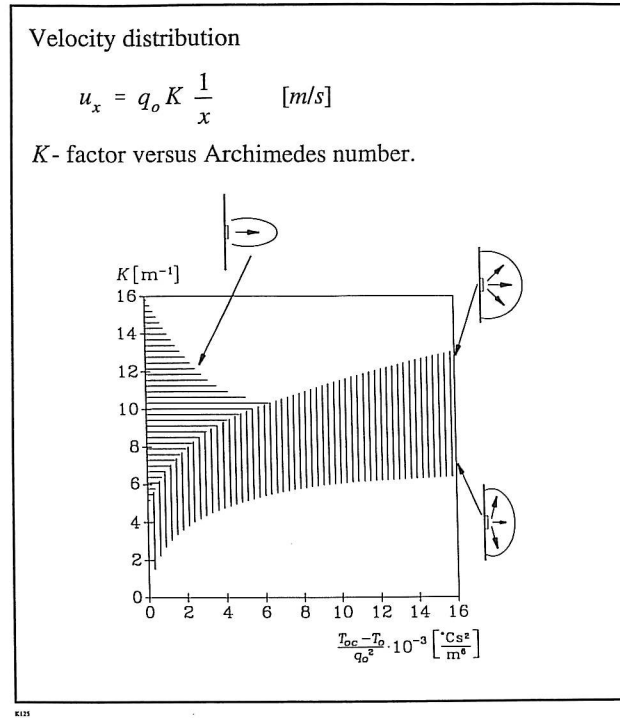

A practical design method

This figure shows a practical method for the calculation of the air velocities in the radial flow from a wall-mounted diffuser. $(T_{oc} - T_o)$ is the temperature difference between the temperature at the height 1.1 m and the supply temperature. The ratio $(T_{oc} - T_o) / q_o^2$ can be regarded as a part of the Archimedes number.


The figure indicates that the first generation of diffusers located in the upper part of the shaded area had a radial distribution of the flow and a high level of the K -value. Some diffusers had even an axial distribution of the flow at low Archimedes number which in this situation gave a further increase in K , but the gravity effect turns the flow into a radial pattern at higher Archimedes numbers. The new generation of diffusers has a distribution with high velocity parallel to the wall and lower velocity perpendicular to the wall (x -direction). This will give the lower K -values shown in the lower part of the figure.

The upper part of the shaded area in the figure is therefore typical of diffusers with radial/axial distribution of the velocity, and the lower part of the shaded area is typical of a "flat" velocity distribution.


The figure is based on diffusers with a height up to 1.0 m and an area up to 0.5 m², and the equation for u_x will be valid at a distance of 1 - 1.5 m from the diffuser, see references [21] and [22].

CONCENTRATION DISTRIBUTION

Vertical concentration distribution in a room with a combined heat and contaminant source versus volume flow rate to the room.

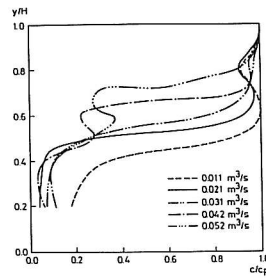

Concentration distribution in a room with thermal manikins, sedentary persons and persons in motion.

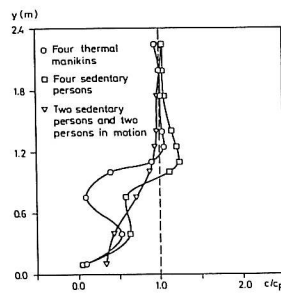


Concentration distribution

The upper figure shows the vertical concentration distribution in a room where the heat sources also work as a contaminant source, [23]. The location of the stratification height is clearly indicated by the measurements, and both the lower and the upper zone have a well-mixed concentration distribution. The tracer gas concentration in the upper zone is close to the concentration in the return opening, c_R , and the concentration in the lower zone is 0.1 to 0.3 times c_R which is typical of many situations in highly loaded rooms. It is obvious that the stratification height is a function of the volume flow rate.


Two of the concentration profiles in the upper figure show a small concentration peak just below the main stratification height. This increase is generated by cold downdraught at the wall which has a neutral buoyancy at the height of $y/H \sim 0.5$.

It is important to preserve the stratification in the room when persons are present and in motion. The lower figure shows the vertical concentration distribution with four thermal manikins. A CO_2 tracer gas is released in the plumes above the manikins. The relative concentration distribution for four persons is also shown and the CO_2 concentration is, in this case, the values obtained from the presence of persons in the room. It is shown that two persons in motion are able to smooth the vertical gradient slightly, but it is in all situations possible to observe a stratification of CO_2 , see reference [24].

Example.

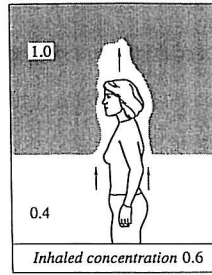

Effectiveness.

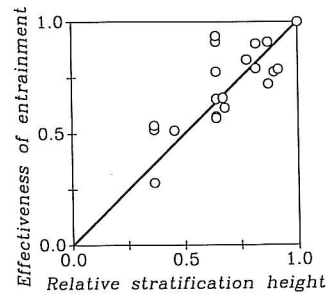

Exposure in stratified surroundings

It is in principle necessary with a high volume flow rate to raise the contaminated upper zone to a level above the breathing zone, but new experience shows that it is possible to reduce the stratification level. This figure of the concentration distribution close to a person shows that the convection boundary layer around the person will move air with less contaminant up into the breathing zone. The inhaled concentration is low ($c_e^* = 0.6$) compared with the surrounding concentration of 1.0.


The lower figure shows that it is possible to formulate an effectiveness of entrainment which is a linear function of the relative stratification height, [13].

$$\eta_e = \frac{c_p - c_e}{c_p - c_f} \sim \frac{y_{st}}{y_e}$$


A stratification height of minimum 1.1 m can be recommended in rooms where the occupants mainly have a sedentary working position, see reference [20].

Movement of the persons will to some extent destroy the protecting effect of the boundary layer around the body, see reference [17].

Visualization of stratified exhaled air

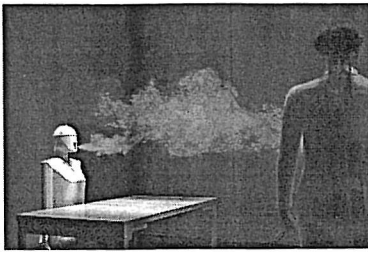

Smoke observations and tracer gas measurements

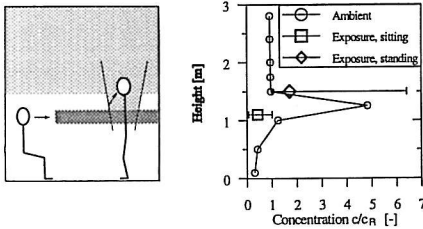

Ventilation effectiveness

Air exchange efficiency

Passive smoking in a displacement ventilated room

In these experiments it is demonstrated that the exhalation flow may stratify because of density differences, that high concentration can occur in the breathing zone and that the exposure may be much larger than expected. The convective boundary layer close to the human body modifies the concentration field locally, so that the inhaled concentration is different from the ambient concentration at the same height. If the exhalation is to give rise to unusually high levels of exposure the stratified layer must be situated below breathing height. Many heat sources will generally give rise to effective mixing. The vertical temperature gradient is assumed to play a role with regard to the stratification height of the exhalation, [18].

Efficiency of the air distribution system

The following chapter will discuss the ventilation effectiveness and the air exchange efficiency.

The ventilation effectiveness shows how fast contaminant is removed from a room and how certain areas are influenced by contaminant sources in the room. The ventilation effectiveness is dependent on the air distribution in the room and, therefore, on the type of air terminal devices, geometry of the room, location of any heat source and location of the contaminant source.

The air exchange efficiency shows how fast air is exchanged in a ventilated room. It is dependent on the type of air terminal devices, geometry of room and location of heat sources, but not on the location of the contaminant sources.

Measurements of air exchange efficiency are useful in connection with the general evaluation of an air distribution system, while the ventilation effectiveness can be used for optimizing of a contaminant source location.

VENTILATION EFFECTIVENESS

Ventilation effectiveness in the occupied zone

$$\varepsilon_{oc} = c_R / c_{oc}$$

Local ventilation index

$$\varepsilon_P = c_R / c_P$$

Mean ventilation effectiveness

$$\bar{\varepsilon} = c_R / \bar{c}$$

Personal exposure index

$$\varepsilon_e = c_R / c_e$$

Tracer gas or relevant contamination in the air supply to the room must be subtracted from the level in the room.

Example:


$$\varepsilon_{oc} = \frac{c_R - c_o}{c_{oc} - c_o}$$

Ventilation effectiveness

Four different definitions are commonly used. The ventilation effectiveness in the occupied zone ε_{oc} , the local ventilation index ε_P , the mean ventilation effectiveness $\bar{\varepsilon}$ and the personal exposure index ε_e , see references [6], [7] and [13].

The number of necessary measurements is different for ε_{oc} , ε_P , ε_e and $\bar{\varepsilon}$. Calculation of the ventilation effectiveness ε_{oc} in the occupied zone includes measurements in several points in the occupied zone as well as measurements of c_R in the return channel. The ventilation index and the personal exposure index can be calculated from two measurements. The mean ventilation effectiveness can also be calculated from two measurements. The return concentration c_R is found during steady state tracer gas release, and the mean value in the room is found by making a complete mixing of room air with a fan after the tracer gas and ventilation system have been shut off.

VENTILATION EFFECTIVENESS AND LOCATION OF RETURN OPENING

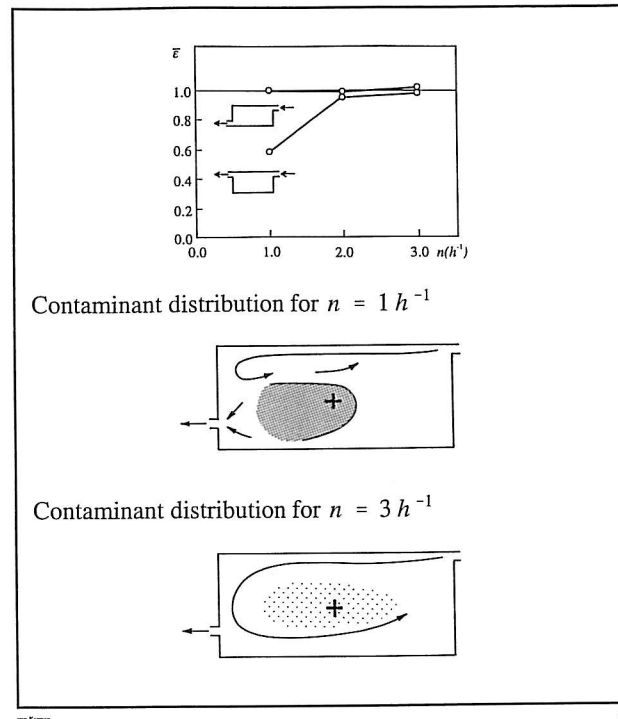


Ventilation effectiveness and location of return opening

It is well known that the return opening only has a very small influence on the velocity distribution in a room, but it may have large influence on the ventilation effectiveness as shown in this example. The upper figure shows the mean ventilation effectiveness in a room with a wall-mounted supply nozzle and two different locations of the return opening. The flow is isothermal and it is obvious from the measurements that a high location of the return opening will decrease the effectiveness at low air change rates. The flow in the room is not fully developed and the lower part of the room will only obtain air movement if the return opening is located in this region.

The two lower figures are obtained with visualization and they show the flow in the case of small and large air change rates in the room with a low location of the return opening. The contaminant distribution around the source (in the middle of the room) is moved towards the return opening as a vertical displacement flow when the air change rate is small and recirculation takes only place in the upper part of the room. The contaminant is fully mixed in the room when the air change rate is large as indicated in the lower figure. Both situations will give a high mean ventilation effectiveness, [25].

THE AGE CONCEPT AND AIR EXCHANGE EFFICIENCY

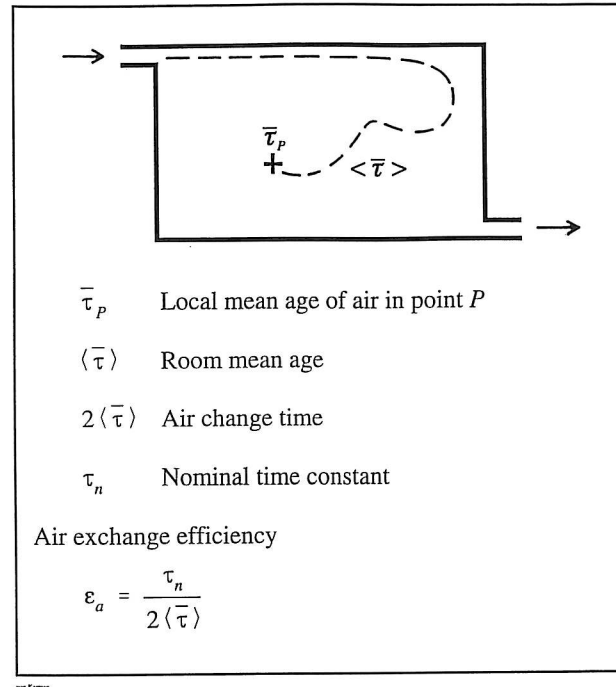


The age concept and air exchange efficiency

The figure illustrates the age concept, [26]. The air has the age zero when it enters the room. The age distribution in point P is given by a statistical distribution and the local mean age is called $\bar{\tau}_P$. The mean value is a function of the location of P . The mean age of all air present in the room can be found from the distribution of $\bar{\tau}_P$ and it is called $\langle \bar{\tau} \rangle$.

The average time it takes to replace the air present in the room is equal to twice the mean age of all air in the room, $2\langle \bar{\tau} \rangle$. The mean age of the air when it leaves the room is always equal to a nominal time constant τ_n of the ventilated space and it is defined as room volume V divided by the ventilation flow rate q_v . The air exchange efficiency ϵ_a is defined as the ratio between the nominal time constant τ_n of the ventilated space and the air exchange time $2\langle \bar{\tau} \rangle$. The nominal time constant τ_n is the theoretically shortest exchange time for all air in the room in the case of a piston flow and $2\langle \bar{\tau} \rangle$ is the real exchange time in a given situation. The air exchange efficiency ϵ_a will therefore have values below 1.0 for all practical air distribution systems, and it can be shown that a system with perfect mixing will have a value of 0.5.

AIR EXCHANGE EFFICIENCY

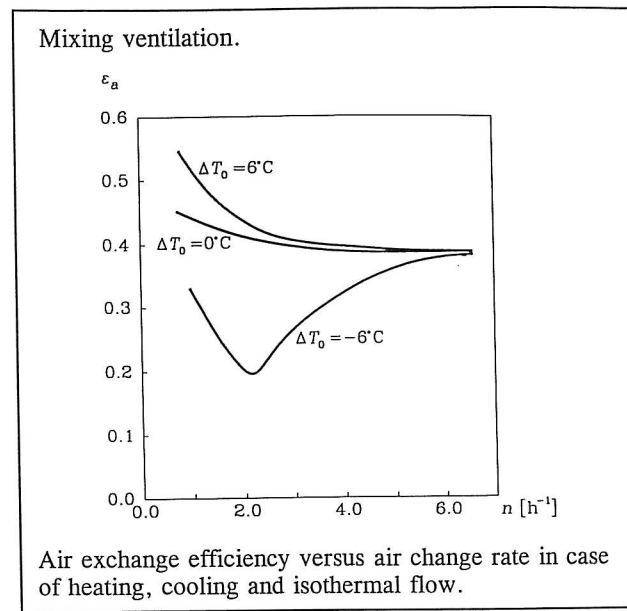

Air exchange efficiency

The air exchange efficiency ϵ_a is useful for a global study of a air distribution system. The figure shows the outcome of measurements in a room with mixing ventilation and a wall-mounted air terminal device. The experiments are made up to a very high value of n (outside the comfort range) in order to study the effect of a fully developed flow. The air exchange efficiency seems to have an asymptotic value of ~ 0.4 . This is in good agreement with the fact that 0.5 is the highest possible value to obtain in case of full mixing. The temperature difference ΔT_0 is the difference between return temperature and supply temperature. ΔT_0 equal to 6°C corresponds to the cooling case. It should generally be expected that a small air change rate will give a small air exchange efficiency but the chilled jet will pass through the area with the measuring equipment at a small air change rate which will raise ϵ_a to a value above 0.5. The air exchange efficiency will reach the value of 0.4 at high flow. This corresponds to an increase velocity and, therefore, a decreasing Archimedes number and a semi-isothermal flow.


The air exchange efficiency will always be lowest for heating because the return opening has a high location which is confirmed by the experiments. The figure also shows that the flow obtains a semi-isothermal character at high air change rates corresponding to a situation with a small Archimedes number.

European Prestandard CEN prENV 1752.

- Design criteria for spaces in different types of buildings given as ℓ/s (m^2 floor) for three categories. Low-polluting building materials and furnishing are assumed.
- Design criteria determined from the calculation of perceived air quality.

$$c_R = 10 \frac{G}{q_o}$$

c_R , G , and q_o are perceived air quality (decipol), pollution source strength (olf) and ventilation rate (ℓ/s), respectively.

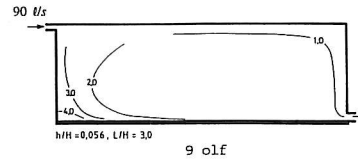

$$\varepsilon_P = c_R / c_P \quad c_P = 10 \frac{G}{q_o \varepsilon_P}$$

Local air quality in a room with more pollution sources.

$$c_P = c_{od} + \frac{10}{q_o} \left(G_{eq} + \frac{G_1}{\varepsilon_{P1}} + \frac{G_2}{\varepsilon_{P2}} + \dots \right)$$

c_P , c_{od} and G_{eq} are local perceived air quality (decipol), outdoor air quality (decipol) and pollution source strength from ventilation equipment (olf).

Minimum air flow rate

Minimum air flow rates are given in the European Prestandard CEN prENV 1752 drawn up by the Technical Committee CEN/TC 156, [27].

The design criteria for the required ventilation are based on the assumption that low-polluting building materials and furnishings are systematically selected, that an assumed occupancy is used, that smoking is not permitted, that the ventilation effectiveness is one and that outdoor air of excellent quality is available. If smoking occurs additional ventilation is required.

The category A, B and C corresponds to 15, 20 and 30 percentage of dissatisfied with respect to indoor air quality.

The design criteria can also be determined from the calculation of perceived air quality.

Indoor air quality

The indoor air quality can be expressed in decipol (dp), where 1 dp is the air quality in a space with a pollution source strength of one olf ventilated by 10 ℓ/s of clean air, i.e. 1 dp = 0.1 olf / (ℓ/s), see references [28] and [29]. The figure shows the distribution in decipol when a source of 9 olf is ventilated by a flow rate of 90 (ℓ/s).

It is possible to find the local air quality from more pollution sources with individual ventilation effectiveness (ε_{P1} , ε_{P2} , ...) if the decipols can be added linearly as shown in the last equation in the figure.

The volume flow rate is often given in the units (ℓ/s) in calculations of perceived air quality.

DESIGN CRITERIA FOR THE CALCULATION OF PERCEIVED AIR QUALITY

Three categories of perceived indoor air quality

Quality level (category)	Perceived air quality	
	% dissatisfied	decipol
A	10	0.6
B	20	1.4
C	30	2.5

Pollution load caused by occupants

	Sensory pollution load olf/occupant
Sedentary, 1-1.2 met ¹⁾	
0% smokers	1
20% smokers ²⁾	2
40% smokers ³⁾	3
100% smokers ⁴⁾	6
Physical exercise	
Low level, 3 met	4
Medium level, 6 met	10
High level (athletes), 10 met	20
Children	
Kindergarten, 3-6 years, 2.7 met	1.2
School, 14-16 years, 1-1.2 met	1.3

Design criteria for the calculation of perceived air quality

The following example shows the calculation of the required ventilation rate (category C) to an office building:

- Low-polluting building materials and furnishings are systematically selected providing a pollution load of 0.1 olf / (m² floor)
- Mixing ventilation ($\bar{\varepsilon} = 1.0$)
- Smoking is not permitted
- Excellent outdoor air quality (0 dp)
- The occupancy is 0.1 person/ (m² floor)

Sensory pollution load from occupants and the building is $G = 1 \cdot 0.1 + 0.1 = 0.2$ olf (m² floor).

Category C corresponds to a perceived air quality c_p of 2.5.

The equation $q_o = 10 G / c_p$ gives the following air flow rate:

$$q_o = 10 \cdot 0.2 / 2.5 = 0.8 \text{ } \ell / \text{s (m}^2 \text{ floor)}$$

References

- [1] Molina, C., C.A.C. Pickering, O. Valbjørn and M. De Bortoli, *Sick Building-Syndrome, A Practical Guide*, Indoor Air Quality and its impact on man, COST Project 613, Commission of the European Communities, 1989.
- [2] Baker, N.V., *Energy and Environment in Non-Domestic Buildings*, Cambridge Architectural Research Ltd., Cambridge, 1995.
- [3] Clausen, G., E. Fernandes de Oliveira, P.O. Fanger, *European Database on Indoor Air Pollution Sources in Buildings*, Proc. of Indoor Air '96, Nagoya, Japan, Vol. 2, pp 639-644, 1996.
- [4] Bartlett, C.L.R. and C.A.C. Pickering, *Medical Aspects of Air Conditioning and other Building Services* (In Air Conditioning System Design for Buildings, Editor: A.F.C. Sherratt J.), McGraw-Hill, London, 1983.
- [5] Nielsen, P.V., *Air Distribution in Rooms - Research and Design Methods*, Proceedings of ROOMVENT '94, Cracow, 1994.
- [6] Nielsen, P.V., *Luftströmung und Luftverteilung in Räumen* (In Lüftungs- und Klimatechnische Gebäudeausrüstung, Editor: S. Nowotny and H.E. Feustel), Bauverlag, Wiesbaden, 1966.
- [7] Nielsen, P.V., *Lecture Notes on Mixing Ventilation*, Internal report, Aalborg University, ISSN 0902-8005 U9513, 1995.
- [8] Nielsen, P.V., *Mathematical Models for Room Air Distribution*, Conference on "System Simulation in Buildings, Liege, 1982.
- [9] Nielsen, P.V., *Models for the Prediction of Room Air Distribution*, Proc. of the 12th AIVC Conference, ISBN 0 946075 53 0, AIVC, Warwick, 1991.
- [10] Nielsen, J.R., P.V. Nielsen and K. Svidt, *Air Distribution in a Furnished Room Ventilated by Mixing Ventilation*, Proceedings of VENTILATION '97, Ottawa, 1997.
- [11] Nielsen, P.V. and Å.T.A. Möller, *Measurements on Buoyant Wall jet Flows in Air-Conditioned Rooms*, ROOMVENT '87, International Conference on Air Distribution in Ventilated Spaces, Stockholm, 1987.
- [12] Nielsen, P.V., *Contaminant Distribution in Industrial Areas with Forced Ventilation and Two-Dimensional Flow*, IIR-Joint Meeting, Commission E1, Essen, 1981.
- [13] Brohus, H. and P.V. Nielsen, *Personal Exposure in Displacement Ventilated Rooms*, Indoor Air, Vol. 6, No. 3, pp. 157-167, September, 1996.
- [14] Brohus, H., H.N. Knudsen, P.V. Nielsen, G. Clausen and P.O. Fanger, *Perceived Air Quality in a Displacement Ventilated Room*, Proceedings of Indoor Air '96, The 7th International Conference on Indoor Air Quality and Climate, July 21-26, Nagoya, Japan, Vol. 1, pp. 811-816, 1996.

- [15] Brohus, H. and P.V. Nielsen, *CFD Models of Persons Evaluated by Full-Scale Wind Channel Experiments*, Proceedings of ROOMVENT '96, 5th International Conference on Air Distribution in Rooms, Yokohama, Japan, July 17-19, Vol. 2, pp. 137-144.
- [16] Brohus, H., *Personal Exposure to Contaminant Sources in Ventilated Rooms*, Ph.D.-thesis, Aalborg University, 1997. ISSN 0902-7953 R9741.
- [17] Bjørn, E., M. Mattsson, M. Sandberg, P.V. Nielsen, *Displacement Ventilation - Effects of Movement and Exhalation*, Proceedings of Healthy Buildings '96, 5th International Conference on Healthy Buildings, 27 September - 3 October, Washington DC, USA, Vol. 2, pp. 163-168, 1997.
- [18] Bjørn, E. and P.V. Nielsen, *Passive Smoking in a Displacement Ventilated Room*, Proceedings of Indoor Air '96, The 7th International Conference on Indoor Air Quality and Climate, July 21-26, Nagoya, Japan, Vol. 1, pp. 887-892, 1996.
- [19] Nielsen, P.V., *Temperature Distribution in a Displacement Ventilated Room*, Proceedings of ROOMVENT '96, Yokohama, 1996.
- [20] Nielsen, P.V., *Displacement Ventilation, Theory and Design*, Aalborg University, ISSN 0902-8002 U9306, 1993.
- [21] Nielsen, P.V., *Velocity Distribution in the Flow from a Wall-Mounted Diffuser in Rooms with Displacement Ventilation*, Proceedings of ROOMVENT '92, Third International Conference on Air Distribution in Rooms, Aalborg, 1992.
- [22] Nielsen, P.V. *Velocity Distribution in a Room with Displacement Ventilation and Low-Level Diffusers*, IEA Annex 20 Report, Aalborg University, 1994.
- [23] Heiselberg, P. and M. Sandberg, *Convection from a Slender Cylinder in a Ventilated Room*, Proceedings of ROOMVENT '90, International Conference on Engineering Aero- and Thermodynamics of Ventilated Rooms, Oslo, 1990.
- [24] Brohus, H. and P.V. Nielsen, *Contaminant Distribution around Persons in Rooms Ventilated by Displacement Ventilation*, Proceedings of ROOMVENT '94, Fourth International Conference on Air Distribution in Rooms, Cracow, Poland, Vol. 1, pp. 293-312, 1994.
- [25] Heiselberg, P. and P.V. Nielsen, *The Contaminant Distribution in a Ventilated Room with Different Air Terminal Devices*, Proc. of the International Conference ROOMVENT '87, Stockholm, 1987.
- [26] Sandberg, M. and M. Sjöberg, *The Use of Moments for Assessing Air Quality in Ventilated Rooms*, Building and Environment, 18, pp. 181-197, 1983.
- [27] *European Prestandard prENV 1752: 1994E*, European Committee for Standardization, rue de Stassart 36, Brussels, 1994.
- [28] Fanger, P.O., *Introduction of the Olf and the Decipol Units to Quantify Air Pollution Perceived by Humans Indoors and Outdoors*, Energy and Buildings, 12: 1-6, 1988.
- [29] *Guidelines for Ventilation Requirements in Buildings*, Report No. 11, Indoor Air Quality and its Impact on Man, Commission of the European Communities, 1992.